




Yealink T46-G/S Quick User Guide



BASIC FEATURES

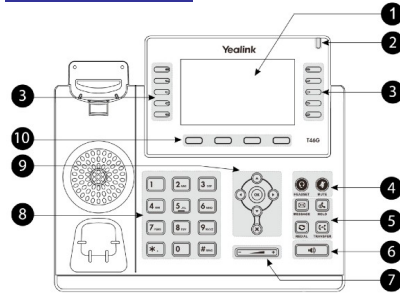


- 1 LCD Screen
- 2 Power LED
- 3 Line Keys
- 4 Headset & Mute Keys
- 5 Message Keys
- 6 Speakerphone Key
- 7 Volume Key
- 8 Key pad
- 9 Scroll Keys
- 10 Soft Keys

MAKING A CALL


Using the handset:

1. Pick up the handset.
2. Enter the number using the keypad and then press the **Send** soft key.

Using the speakerphone:

1. With the handset on-hook, press .
2. Enter the number, then press the **Send** softkey.




Using the headset:

1. With the headset connected,  to activate the headset mode.
2. Enter the number, and then press the **Send** softkey.

Note: During a call you may alternate between headset, hands-free speakerphone and handset modes by pressing the **Headset** key or **Speakerphone** key or by picking up the handset. Headset mode requires a headset be connected to the phone.

Multiple calls:


1. Press the line key. The active call is placed on hold.
2. Enter the desired number using the keypad.
3. Press the **Send** soft key.

You can press  or  to switch between calls, then press  again to resume the desired call.

ANSWERING A CALL

Using the handset:
Pick up the handset.

Using the speakerphone:

Press .

Using the headset:

Press .


Note: You may ignore an incoming call by pressing the **Reject** soft key.

ENDING A CALL

Using the handset:

Hang up the handset or press the **End Call** soft key.





Using the speakerphone:


Press  or the **End Call** soft key.

Using the headset:


Press the **End Call** soft key.


REDIAL

Press  to enter the **Placed Calls** list. Press  or  to select the desired call, then press  or the **Send** soft key.


Press  twice when the phone is idle to call the last dialed number.


MUTING A CALL

Press  to mute the microphone during a call.

Press  again to un-mute the call.



VOLUME ADJUSTMENT

Press  during a call to adjust the receiver volume of the handset/speakerphone/headset.

Press  when the phone is idle to adjust the ringer volume.


RING TONE


1. Press the **Menu** soft key when the phone is idle, then select **Basic > Sound > Ring Tones**.




2. Press  or  to select the desired ring tone.

3. Press the **Save** soft key to accept the change.

PUTTING A CALL ON HOLD

Press  or the **Hold** soft key during an active call. To resume a held call, press the **Resume** soft key.

If there is only one call on hold, press  or the **Resume** soft key.

If there is more than one call on hold, press  or  to select the desired call and then press  or the **Resume** soft key.

CALL PARK AND RETRIEVE

1. While on an active call, press an available park, indicated by a green light.
2. The call will be placed on park and will indicate with a blinking red light.
3. The caller will now be placed on hold and will hear a message or on hold music if configured.
4. The caller is now parked.
5. To retrieve a parked call, simply lift the handset and press the button next to the desired call park.


TRANSFERING A CALL

There are three ways to transfer a call: Blind Transfer, Attended Transfer and Semi-Attended Transfer.

Blind Transfer:

While on a call, press the button of the person you wish to transfer to (if their light indicates they are available)



Or-

1. Press  or the **Transfer** soft key during an active call. The call is placed on hold.

2. Enter the number you want to transfer to, then press

 or the **Transfer** soft key.

Attended Transfer:

1. Press  the **Transfer** soft key during an active call. The call is placed on hold.
2. Enter the number you want to transfer to, then press .
3. Press the **Transfer** soft key when the second party answers.



FORWARDING A CALL

1. Press the **Menu** soft key when the phone is idle, then select **Call Features > Call Forward**.
2. Select the desired forward type:

Always Forward: Incoming calls are all forwarded unconditionally.

Busy Forward: Incoming calls are forwarded when the phone is busy.

No Answer Forward: Incoming calls are forwarded when the phone is not answered after a preset time period.

3. Enter the number you want to forward to. For **No Answer Forward**, press  or  to select the desired ring time to wait before forwarding.
4. Press the **Save** soft key to accept the change.

CONFERENCE CALL


1. Press the **Conference** soft key during an active call. The call is placed on hold.
2. Enter the number of the second party, then press the **Send** soft key.
3. Press the **Conference** soft key again when the second party answers. All parties are now joined in the conference.
4. Hang up to disconnect yourself. The other parties will remain connected. Press the **End Call** soft key to disconnect all parties.

Note: You may split the conference call into two individual calls by pressing the **Split** soft key.

VOICE MAIL

The Message Waiting Indicator on the idle screen indicates that you have new voice messages waiting. The Message key LED lights up in red.

Listening to voice messages:

1. Press  or the **Connect** soft key.
2. Follow the voice prompts to listen to your voice messages. Alternatively you can dial *98 to access the Voicemail system at any time. The system will prompt for your password. **Note:** when accessing the voice mail system for the first time your password is 1-3-5-7. Change this to a 4-digit number you can easily recall.



CONTACT DIRECTORY

Adding a contact:



1. Press the **Directory** soft key when the phone is idle, then select the desired group.
2. Press the **Add** soft key to add a contact.
3. Enter a unique contact name in the **Name** field and contact numbers in the corresponding fields.
4. Press the **Save** soft key to accept the change.

Note: If your phone firmware is updated, contacts entered in this manner will be lost.

Editing a contact:

1. Press the **Directory** soft key when the phone is idle, then select the desired group.
2. Press  or  to select the desired contact, then press the **Option** soft key and then select **Detail** from the prompt list.
3. Update the contact information.
4. Press the **Save** soft key to accept the change.

Deleting a contact:

1. Press the **Directory** soft key when the phone is idle, and then select the desired group.
2. Press  or  to select the desired contact, then press the **Option** soft key and select **Delete** from the prompt list.
3. Press the OK soft key when the LCD screen prompts "Delete Selected Item?"

CALL PICKUP

1. To pick up a call ringing a specific phone that is not ringing as part of a Ring Group, dial *11xxx (xxx being the extension of the ringing phone).
2. For example your neighbor's phone extension 112 is ringing. You would dial *11112 to pickup that call.
3. To pick up a call on any ringing phone dial *8.